

Relay	Terminal	External Connection	Internal Connection
E1 Radiator fan relay	30		Fuse 1
	85		O2 switched 12V
	86		E1 to radiator thermostswitch
	87		E3 to radiator fan motor
E2 Parking lights and concealed headlights control relay	30		D4 to headlight switch, supply side fuses 1, 2
	85		O2 switched 12 V
	86		G5 to ground
	87a		D6 to headlight switch, supply side fuse 11
E3 Right headlight motor relay	30		Supply side fuse 12
	85		A3 to right headlight motor
	86		A6 to right headlight motor
	87a		G5 to ground
E4 Headlight high beam relay	30		G5 to ground
	85		Fuse 9
	86		O1 constant 12V
	87a		H1 to hi-lo switch
E5 Left headlight motor relay	30		G5 to ground
	85		Supply side fuses 5, 6
	86		B1 to left headlight motor
	87a		B2 to left headlight motor
E6 Power window relay	30		G5 to ground
	85		Fuse 10
	86		Fuse 23
	87		G6 to power window switches
E7 Rear window defogger relay	30		O2 switched 12V
	85		G5 to ground
	86		Fuse 17
	87a		H2 to defogger switch
E8 Horns relay	30		G5 to ground
	85		F1 to defogger w/l
	86		N1 to rear window defogger
	87		Fuse 15
1 Courtesy light delayer	30	+ VIO/WHT to left door light, to H10 to fuse 13, to cigar lighter, to right door light, to key in switch	Fuse 15
	85	I RED to ignition switch	Fuse 15
	86	L BLK/VIO to all interior lights	H3 to horn switch
	87	31 BLK to ground	E2 to horns
2 AC condensor fan relay	30	P WHT/BLK to door switches to H6	
	85		
	86		
	87		
3 AC evaporator (cooler) relay	30	YEL to I3 to fuse 18	
	85	RED to I6 to M1 to condensor fan thermostswitch	
	86	WHT to I5 to O2 switched 12V	
	87	LTBLU to I7 to M4 to condensor fan motor	
3 AC evaporator (cooler) relay	30	PNK/BLK to AC relay (30) to L3 to fuse 20	
	85	RED/GRN to I9 to H12 to AC controls	
	86	BRN/WHT to AC relay (85) to AC cut-out relay (87a)	
	87	BLU/BLK to I10 to H11 to cooler fan motor	

4 Seat belts relay	<p>30 VIO to I2 to H7 to seatbelt buzzer 85 GRN to I4 to H8 to seatbelt w/l, to seatbelt timer C 86 YEL to seatbelt timer +, YEL/BLK to I8 to fuse 19 87a ORN to I1 to H6 to courtesy light timer P, to right and left door switches 87 YEL to L6 to R4 to left seatbelt switch</p>
5 Compressor clutch relay (Air conditioner relay)	<p>30 WHT/RED to L3 to fuse 20, PNK/BLK to cooler relay (30) 85 BRN/WHT to cooler relay (86), BRN/WHT to AC cut-out relay (87a) 86 VIO to L4 to H9 to AC controls 87 BLU to L8 to R2 to low pressure switch, to G2 to frost prevent switch, to M3 to safety thermostich</p>
6 AC cut-off (at start) relay	<p>30 YEL to seatbelt relay to I8 to fuse 19 85 RED to L2 to D7 to ignition switch start signal 86 BLK to ground 87a BRN/WHT to AC relay (85), cooler relay (86)</p>
7 Seat belts delayer	<p>+ YEL to setbelt relay (86) and L8 to fuse 18 C GRN to seatbelt relay (85) and to I4 to H8 to seatbelt w/l C1 WHT/BLK to L1 to P11 to handbrake switch, L1 to D12 to brake w/l - BLK/VIO to ground</p>
8 Wiper delay timer	<p>INT GRY to wiper motor, to wiper switch - YEL to wiper switch + RED to wiper switch F LTBLU/WHT to wiper motor, to wiper switch</p>
9 Turn/hazard flasher	<p>+ WHT to hazard switch L VIO to hazard switch, turn signal switch P VIO/WHT to turn signal w/l//</p>