

Fuel Injection System

102.26

Page 10-95

IDLE SPEED ADJUSTMENT

NOTE: Engine must be at normal operating temperature with cooling fan off when adjusting idle speed.

Connect tachometer. Run engine until it reaches normal operating temperature.

Adjust idle speed adjustment screw (1) to obtain 800 to 900 RPM.

1. Idle speed adjustment screw

