


Fuse	Ampere rating [A]	Functions
F1		Not used
F2	30	Locking and deadlocking
F3	5	Air bags and pre-tensioners control unit
F4	10	Automatic gearbox switch, diagnostic socket, electrochromatic mirror

F5	30	Driver and passenger electric windows
F6	30	Sunroof
F7	5	Glove box light, map reading lights, courtesy lights, courtesy mirrors
F8	20	Multifunction display, audio equipment, top-of-column, trailer fuse box (accessory), alarm, alarm siren
F9	30	Front lighter, 12 V rear socket, glove box light, map reading lights, courtesy lights, courtesy mirrors.
F10	15	Tyre under-inlation detection, CD changer
F11	15	Diagnostic socket, ignition switch
F12	15	Trailer fuse box (accessory), parking assistance control unit supply, passenger seat memory unit, rain and brightness sensor, alarm
F13	5	Windscreen wipers relay control, engine fuse box 2
F14	15	Driver's seat memory unit, instrument panel, air bags and pre-tensioners control unit, air conditioning control panel, seat belt fastening management control unit, steering wheel adjustment switch, hands-free kit

F15	30	Locking and deadlocking
F16	_	PARC shunt

## Engine compartment fuses

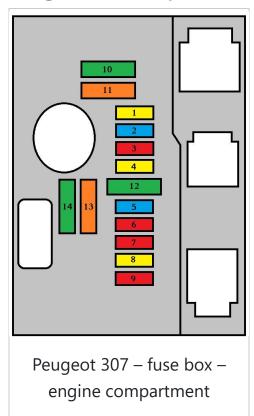

Fuse	Ampere rating [A]	Functions
1	20	Engine control unit, fan assembly relay supply
2	15	Horn
3	10	Wash-wipe pump
4	20	Headlamp wash pump
5	15	Fuel pump, engine management actuators (air low sensor, solenoid valves,)
6	10	ESP control unit, engine coolant level sensor
7	10	Automatic headlamp adjustment
8	20	Starter coil
9	10	Directional headlamps control unit, additional heating switching and protection control unit, clutch switch
10	30	Engine management actuators (ignition coil, injectors, thermostats, solenoid valves, oxygen sensors), diesel additive pump, fuel pump, engine control unit, Blow-by heater

11	40	Air conditioning blower
12	30	Windscreen wipers
13	40	Built-in systems interface supply (ignition positive)
14	30	Not used

## Boot compartment

Fuse	Ampere rating [A]	Functions
G29		Not used
G30	5	Heated rear screen
G31	5	Tyre under-inlation detection, CD changer
G32		Not used
G33	5	Power steering electropump unit, dual-function brake switch
G34	5	Dual-function brake switch, automatic gearbox relay
G35	5	Steering wheel angle sensor and ESP gyrometer sensor

G36	25	Hi-Fi ampliier
G37	15	Automatic gearbox
G38	20	Heated seats
G39	30	Passenger seat memory unit
G40	30	Driver's seat memory unit

WARNING: Terminal and harness assignments for individual connectors will vary depending on vehicle equipment level, model, and market